



abode Wireless Remote Key Fob

The abode Key Fob is an accessory for the abode system. Each Key Fob can be assigned to a different user and it's the quickest way to turn the alarm system on or off. Arming or Disarming your security system with your key fob does not require a code to be entered. Your key fob will function anywhere within a 100+ foot range from the gateway.

Arm away button Activates the Armed Away mode when the user is leaving the home. (both interior motions and perimeter door/window devices are On)


Home button Activates the Armed Home mode which enables the user to remain in the home and move freely about while the perimeter doors and windows with sensors are armed. (Interior Off & Perimeter On)

Disarm / standby button Places your system into the disarmed/standby mode. (Fire & water sensors, always on)

Signal indicator lights up red when the Key Fob is transmitting a signal.

When pressing one of the buttons, hold it down until the red LED indicator goes out to ensure a signal is sent.

Familiarize yourself with the Buttons Example; Press the top left button when your leaving home, and the bottom left button when you come home. Top right when someone stays in the home.

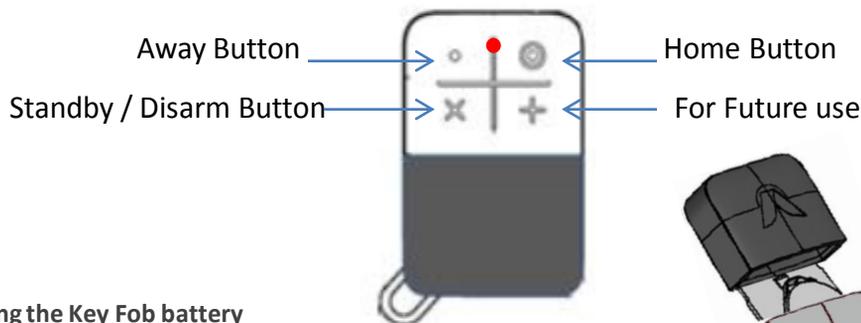

Replacing the Key Fob battery

The Key Fob uses a CR2032 3V 230mAh Lithium coin cell battery, Pull apart the Key Fob and replace battery.

Battery life 6+ years

Pairing the Key Fob with the gateway:

If your key fob came with the kit it will already be paired with the gateway, just pull the battery tab and start using it.

When adding an additional key fob to the gateway, you will need to use the abode web app, at my.goabode.com. After pulling the battery tab out, access your abode web account and click on the Device tab on the left column of the home screen.

Step 1. On the devices page, click on the large plus + at the top middle of the screen. This will pop up the Add Device screen, then click on the Other Devices at the top of that screen, this will place the gateway into the Pairing Mode.

Step 2. When the screen pops up that says Your Gateway is in the Pairing Mode.

Step 3. Press down any one of the buttons on the key fob and release

When the gateway receives the pairing signal transmitted from the device, the gateway will emit 2 beeps to confirm it has been accepted, and the screen will display the device information for selection and the option to name the description of the device

If the key fob was not paired with the gateway, return to step #1 and try again.